


Servo Press JPE Series


How to Read the Model No. / Serial No.

Plates are affixed to both main unit and controller. Please check both plates.

Identification Plate Positions

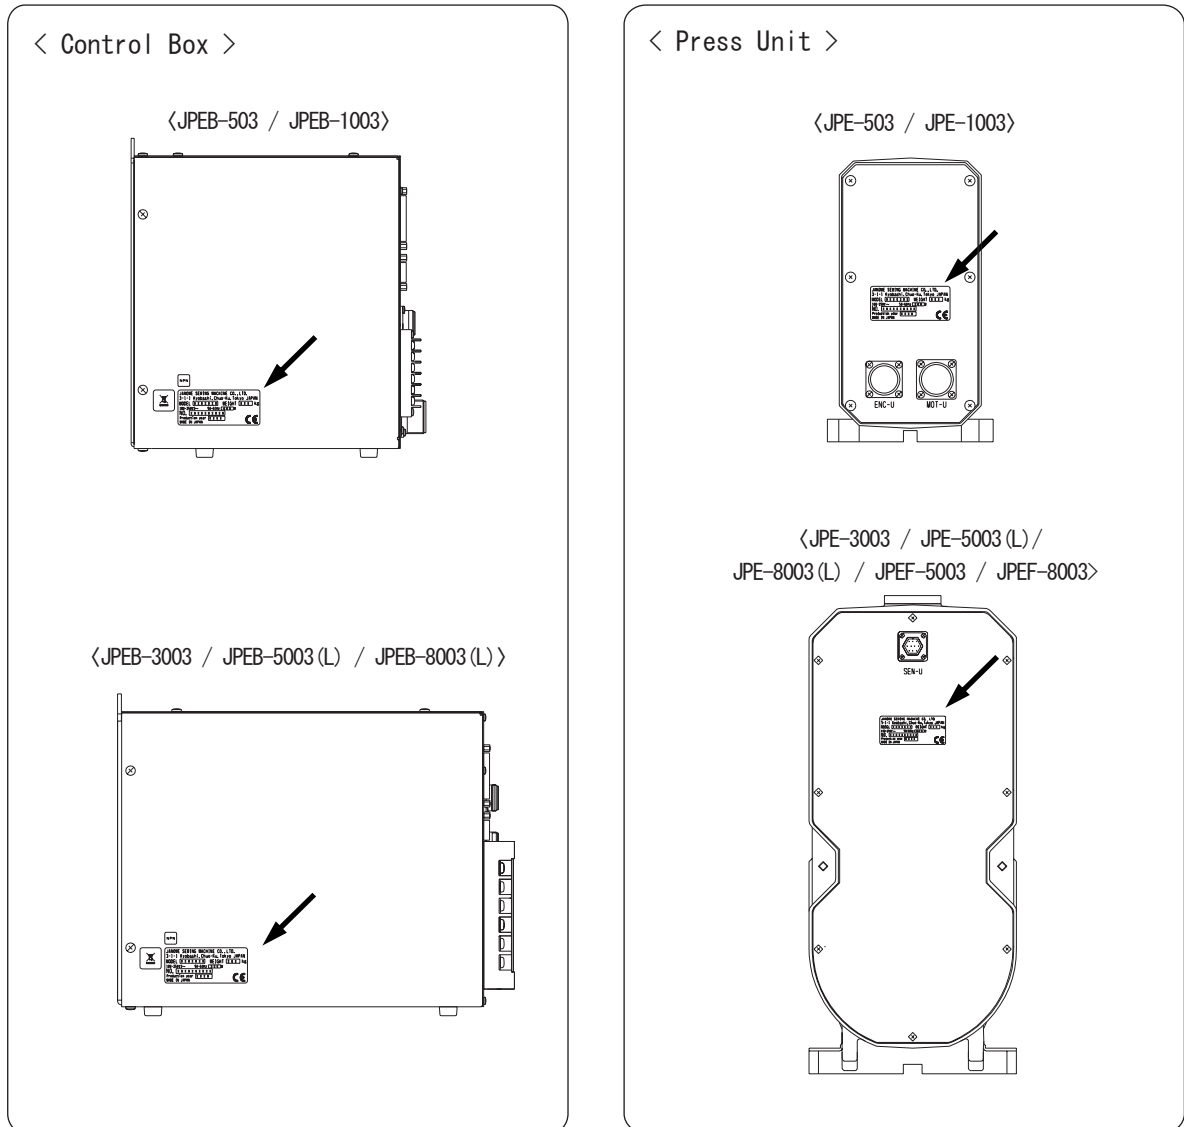

How to Check the Identification Plate

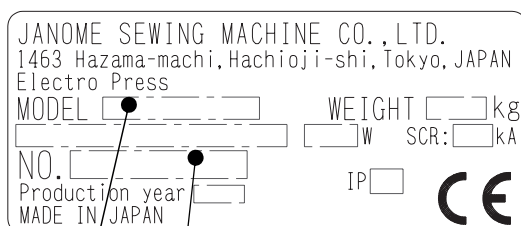

① Model Number

② Serial Number

Example: 09E10N0001