


Servo Press JP Series 4 Unit Type


How to Read the Model No. / Serial No.

Plates are affixed to both main unit and controller. Please check both plates.

Identification Plate Positions

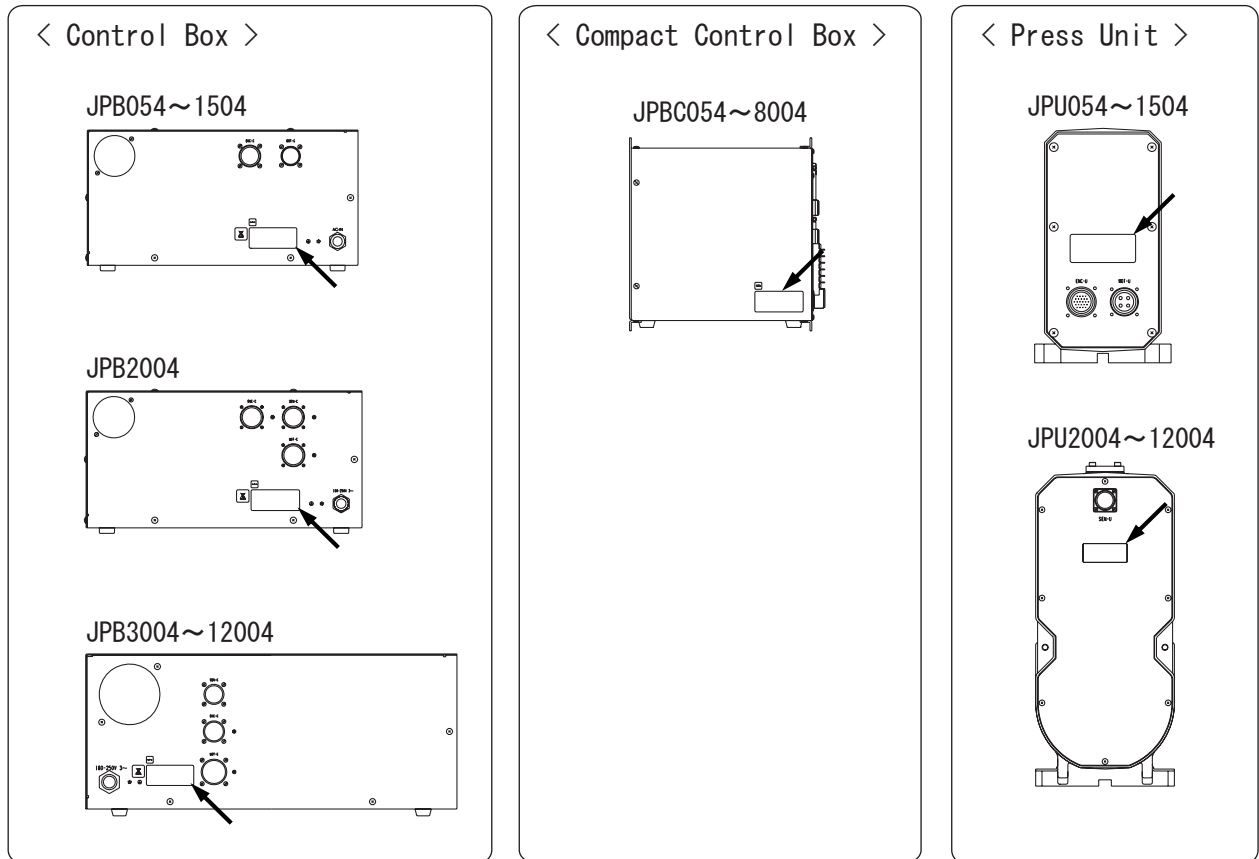

How to Check the Identification Plate

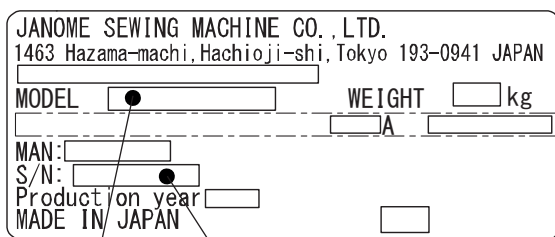

- ① Model number
- ② Serial number

Example: 16U10N0001

(CE Specifications)

